

Installing instruction modular pneumatic manifolds

Manifold assembly

Byonet connection with O-ring seals: Push elements together and turn them through 90° to lock them.



Rail fixture

Hook the long flexible tang of the individual module or manifold in position, and snap the opposite side in place.

To remove, press against the flexible tang.



Gauge connection

Connection 2 is always on the front of the module and is closed with a screw and plug. This permits adjustments and function tests.

Connection examples

1. Tube connections
 - SERTO unions of plastic, brass, steel, stainless steel
 - SERTO flip push-in fittings
 - SERTO hose nipples
2. Gauge connection with SERTO quick-disconnect coupling.
Avoids pressure loss during connection of measuring equipment.
3. Regulating pick-offs
SERTO valves in a variety of types and materials are available.
4. Universal marking facilities